MIXER MODE CONTROL ROOM

INTERACTIVE TRAINING CONTROL INTERFACE, USE YOUR MOUSE TO HOVER OVER SECTIONS, CLICK TO ACTIVATE

AVR (AV EQUIPMENT RACK)

(tp-images/sb/101.png)

The Equipment rack is located in the Control room. After opening the front door, you will gain access to the CD, Blu Ray ClearCom and have the ability to manually route video in the event of an emergency.

SHURE WIRELESS MICS

(tp-images/shure.png)

The Shure Microphone receivers are located next to the audio desk. To re-program any of the microphones or add additional microphones, please take time to read and watch the instructional video's located at in the FAQ section.

SOUNDCRAFT MIXER

(tp-images/scraft.png)

Please take time to self-train with the sound desk. Onlt constant use will give you familiarity and confidence to use the mixing console.

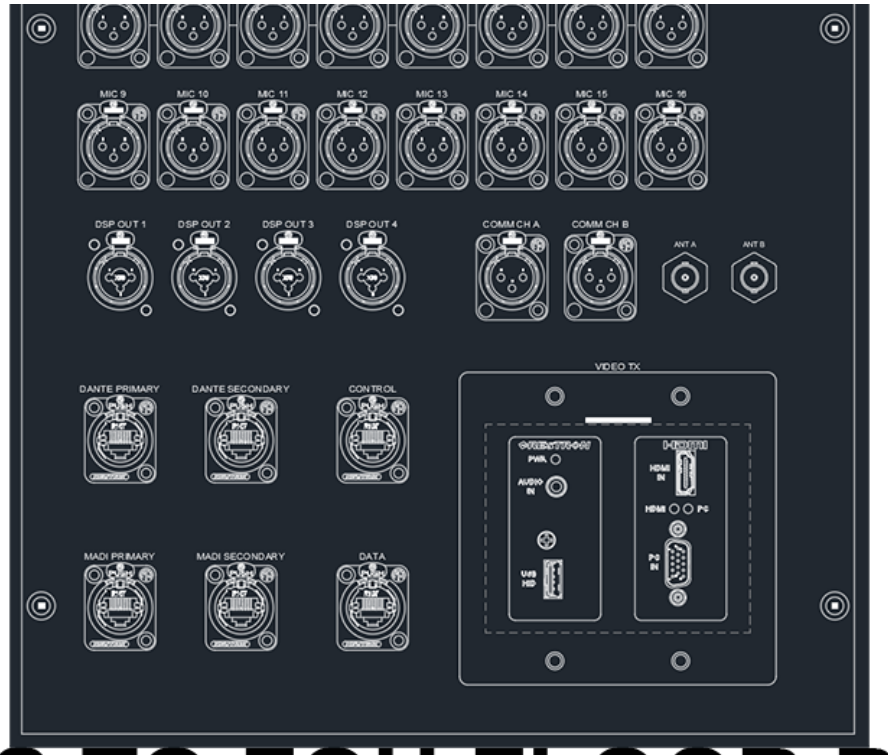

TIES TO FOH FLOOR BOX

(tp-images/sb/cont-rm.png)

BLU-RAY, CD & CLEAR-COM

(tp-images/sb/1.jpg)

DM MD 16 x 16 ROUTER

(tp-images/sb/2.jpg)

There may come a time where you may have to manually route video, this can be done with ease by following these instructions. From the front of the DM-MD 16 x 16, select "ROUTE." Then select the desired Source you wish to route. The Sources are on the top, then select the destinations to route to, That would be Inputs 1 and 7. Once you have selected thes inputs and outputs, you the press the ENTER button. The Enter Button initiates the route.

MIXER MODE: CONTROL ROOM

© Copyright **ACS Advanced Cable Solutions**. All Rights Reserved

Advanced Cable Solutions, 26074 Avenue Hall, Ste.1, Valencia, CA 91355. acscabling.com (https://acscabling.com//)

^
(pow