MIXER MODE TASCAM CD

INTERACTIVE TRAINING CONTROL INTERFACE, USE YOUR MOUSE TO HOVER OVER SECTIONS, CLICK TO ACTIVATE

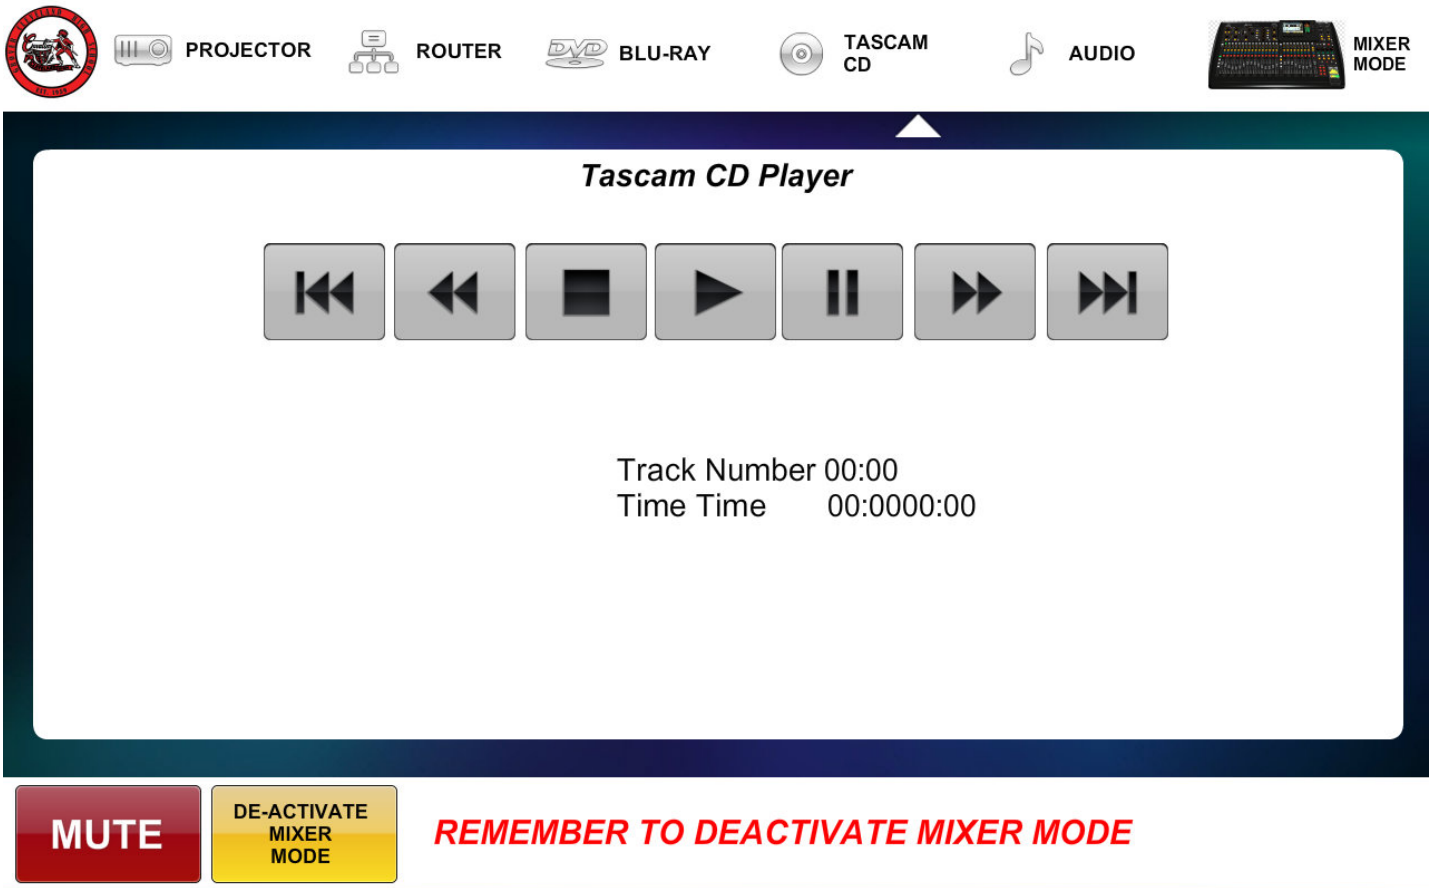

TASCAM CD: Can not only play CD's, but allows bluetooth, memory cards and USB media.

TASCAM CD AUDIO IS NOW GOING DIRECT TO THE MIXER: BEWARE OF HIGH LEVELS OF AUDIO

AUDIO VISUAL CONTROL SYSTEMS: STANDARD OPERATING PROCEDURE

Selecting Tascam CD will also display a Pop Up page allowing you to control the functionality of the Player.

Download the instruction manual in the downloads section and pair your device to the CD player.

Be very careful when you connect Blutooth devices as you will also be able to control audio using the connected device.

© Copyright **ACS Advanced Cable Solutions**. All Rights Reserved

Advanced Cable Solutions, 26074 Avenue Hall, Ste.1, Valencia, CA 91355. acscabling.com (https://acscabling.com//)

^
(pow